

## INDEX



- Axle  
 geared hub, coaster brake *see* 2-1, 3-1, 4-1, 5-1  
 for parts chart  
 SA cable adjustment 1-4 thru 1-6, 4-2, 4-3, 5-2, 5-3  
 thread size 2-1, 3-1, 5-10
- Ball bearing *see* bearing
- Ball cup  
 replacement, SA left 4-20  
 Shimano tool 4-12, 5-10
- Bearing  
 hub shifters 5-2, 5-3
- Bell crank 5-2
- Bevel  
 on SA-S3C gear-ring pawl ring 5-21
- Brake  
 arm attachment 5-1, 5-2  
 terminology 2-2  
 trouble shooting, parts overhaul *see* 2-1, 3-1, 4-1, 5-1
- Cable  
 adjustment 4-2, 4-3, 5-2, 5-3
- Cartridge  
 SA geared hub *assembled internal parts* 4-8, 4-24, 5-21  
 Shimano hub *new model type* 4-8, 4-14, 4-15, 5-8, 5-14  
 thru 5-17
- Chainstay  
 brake arm attachment 5-1, 5-2
- Cleaning parts 2-1, 3-1, 4-1, 5-1
- Coaster brake  
 terminology 2-2  
 trouble shooting, parts, overhaul *see* 2-1, 3-1, 4-10, 5-1
- Cog *see* sprocket
- Dead spot  
 SA cable adjustment 4-3, 5-3
- Degreasing 1-2
- Disassembly *see* 2-1, 3-1, 4-1, 5-1
- Dishing of sprockets 1-2, 1-3
- Disc,  
 multiple disc coaster brake 2-4, 2-30 thru 2-33, 3-2,  
 3-4, 3-9 thru 3-11
- Expander coaster brake,  
 trouble shooting 2-3
- Five speed geared hub 1-6, 4-22 thru 2-32
- Flick control *see* trigger
- Four speed 1-6, 4-3, 4-6, 4-23
- Gear Table  
 for internally geared hubs 5-35
- Geared hub  
 bearing adjustment 1-2  
 shifter adjustment 1-4 thru 1-6, 4-2, 4-3, 5-2, 5-3  
 trouble shooting, parts and overhaul 3-1, 4-1, 5-1
- Indicator *geared hub part, also called pull chain*  
 adjustment 1-6, 4-3, 5-3
- Internally-geared hub *see* geared hub
- Left-handed threads  
 use on  
 shift cable nut 4-2, 5-2  
 sprocket lockrings 1-2
- Lever, trigger 1-3 thru 1-6, 4-2, 4-3, 5-2, 5-3
- Lockring, single sprocket 1-3
- Lubrication *see* 2-1, 3-1, 4-1, 5-1
- Lugged sprocket, single-sprocket hubs 1-2, 1-3
- Parts *also see parts name* 2-2  
*also see* 2-1, 3-1, 5-1 *for parts list*
- Pinion timing *5-speed hub pinion alignment* 4-25
- Race *see* bearings
- Rear hub dimension *see* geared hub
- Roller drive 2-5
- Roller retainer  
 SA, SC coaster brake part 2-24, 2-26, 2-27
- Shift lever 1-3 thru 1-6, 4-1, 4-2, 5-1, 5-2
- Single-speed coaster brake *see* 2-1
- Sliding clutch 4-1, 5-1
- Spring cap  
 SA 3-speed part 4-19, 5-21
- Sprocket  
 coaster brake 2-1, 3-1, 5-1  
 geared hub 1-2, 1-3, 4-1  
 three-lugged 1-2, 1-3
- Terminology  
 coaster brake parts 2-2  
 geared hubs 1-1
- Three-speed *see* 4-1, 5-1
- Timing *5-speed hub pinion alignment* 4-25
- Tool  
 ball cup 4-2, 5-10  
 Bendix wrench 3-6
- Torque arm SA *term for brake arm* 2-2
- Trouble shooting  
 1-speed coaster brake 2-3 thru 2-5  
 2-speed coaster brake 3-2, 3-3  
 3-speed coaster brake 5-4 thru 5-7  
 3-, 4-, 5-speed hub 4-4 thru 4-7
- Trigger *gear shift lever for geared hub*  
 1-3 thru 1-6, 4-2, 5-1
- Trunnion Sachs *term for planet gear pin*
- Wrench  
 Bendix 3-6, 3-9  
 cone 1-2  
 hook 1-2